 


# ASSEMBLY INSTRUCTIONS

---

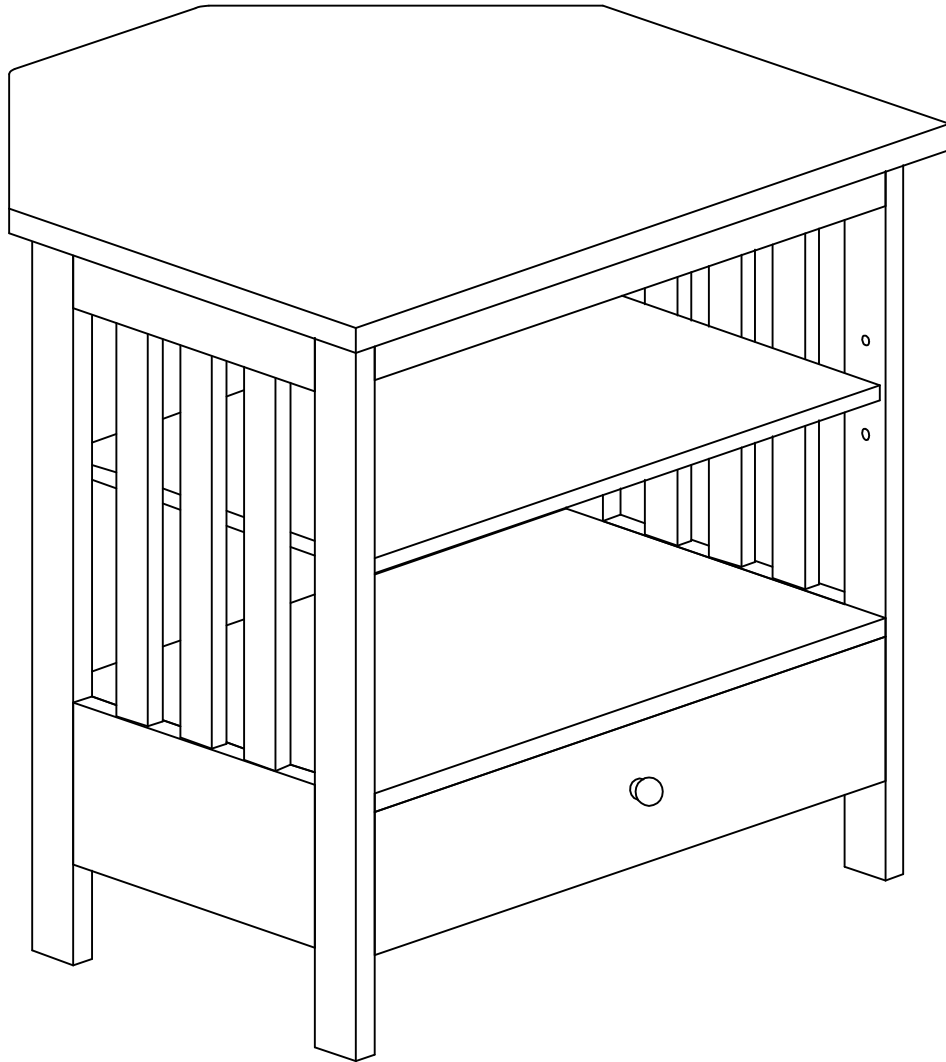

---

Description : MISSION CORNER TV STAND  
Item No. : TV-27

## BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

### IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

### WARNING:

 
 
 


 
 

 

- Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your product. Protect the surface of the product with cloth if you are using any product with rubber feet or base.

### ASSEMBLY TOOLS REQUIRED NOT INCLUDED




 









## PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Top	1		F	Shelf	1	
B	Side frame (L-R)	2		G	Drawer side (L-R)	2	
C	Supporting bar	1		H	Drawer front	1	
D	Bottom panel	1		I	Drawer bottom	1	
E	Back panel	1		J	Drawer back	1	
 
## HARDWARE LIST

    When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6x35mm)	8		6	Flat washer (Φ6.5x19mm)	8	
2	Long screw (M4x35mm)	2		7	Bracket	4	
3	Allen key (M4x80mm)	1		8	Pan head screw *Metal knob: (M4x22mm) *Wooden knob: (M4x25mm)	1	
4	Short screw (M3x15mm)	7		9	Medium screw (M4x30mm)	8	
5	Spring washer (Φ6.5x13mm)	8		10	Wooden nob (Φ38x30mm)	1	
	<b>METAL KNOB</b> (Φ30x30mm) <b>GOES WITH</b> <b>FINISHED ITEM</b> <b>ONLY.</b>	1					


ITEM NO.: TV-27  
REVISED JAN 09, 2016

Printed in Vietnam

## STEP 1

 
Attach bottom panel (D) to side frames (B) with bolts (1) and washers (5) and (6) as shown below. Tighten with Allen key (3).

Attach supporting bar (C) to side frames (B) with screws (2) as shown below. Tighten with a screwdriver.

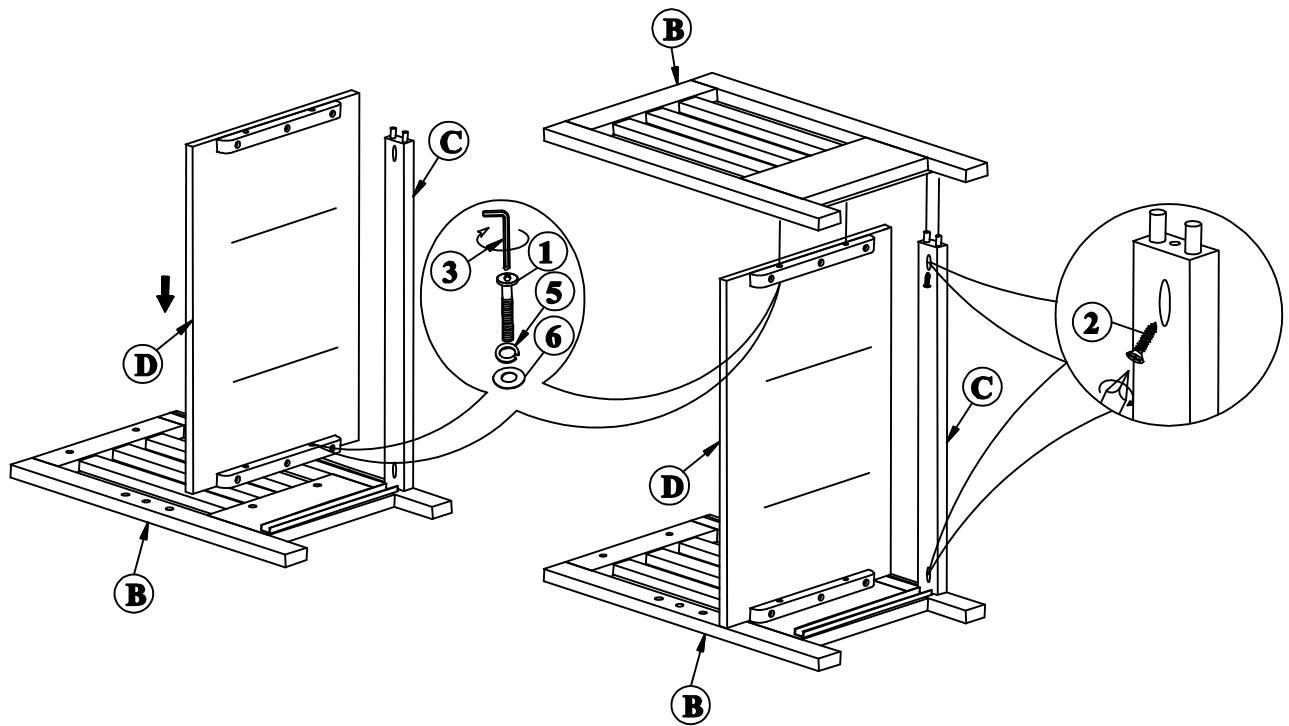


## STEP 2

 Slide back panel (E) into grooves of side frames (B) as shown below.

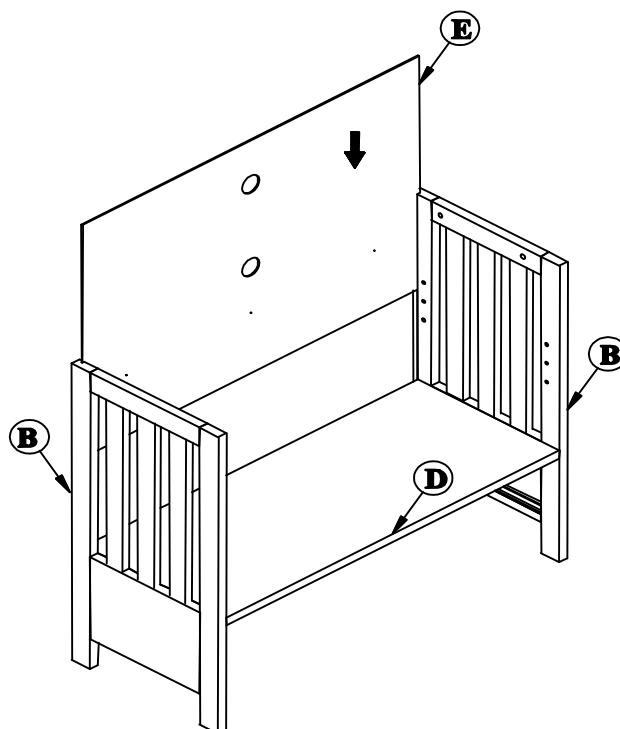


## STEP 3

 Attach top (A) to side frames (B) with bolts (1) and washers (5) and (6) as shown below. Tighten with Allen key (3).

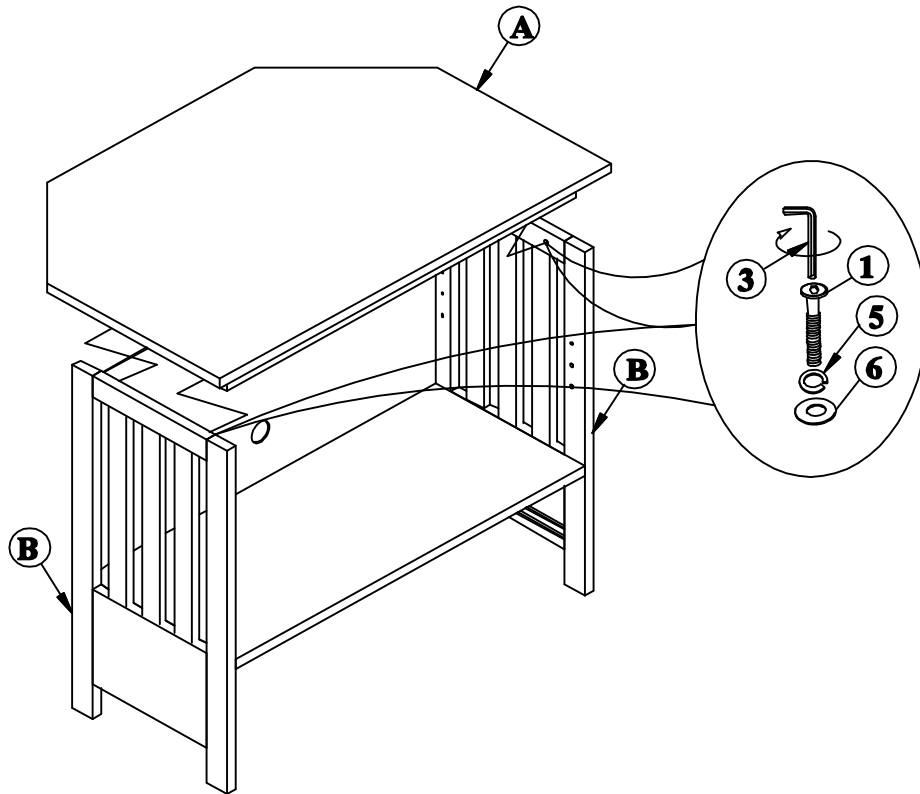


## STEP 4

 Attach brackets (7) to side frames (B) as shown below. Then place shelf (F) on the brackets and attach with screws (4). Tighten with a screwdriver.

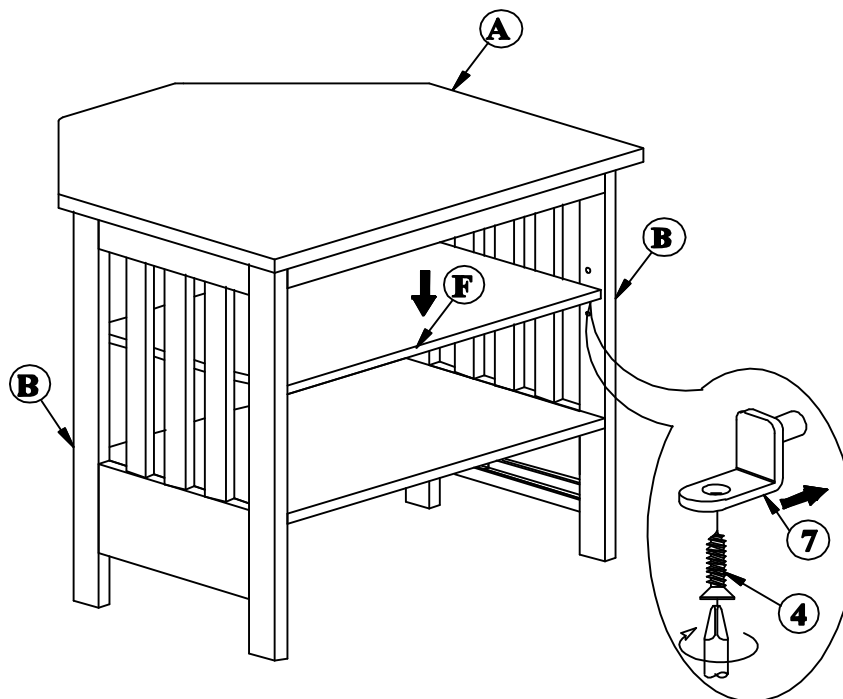


## STEP 5

 Attach back panel (E) to the unit with screws (4). Tighten with a screwdriver.

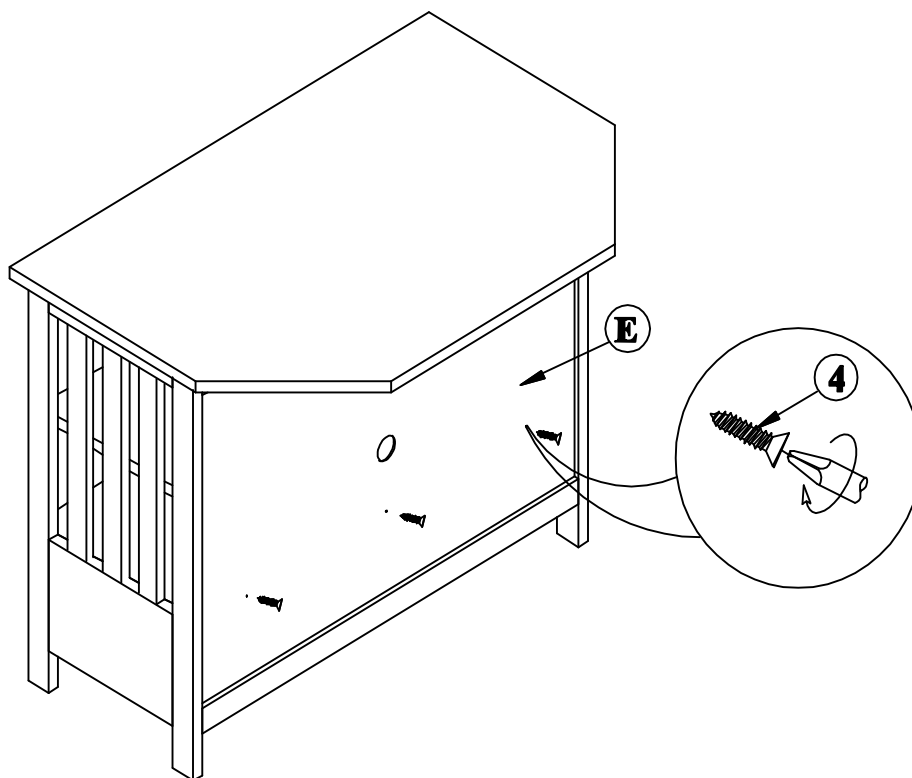


## STEP 6

 Attach drawer sides (G) to drawer front (H) with screws (9) as shown below. Tighten with a screwdriver.

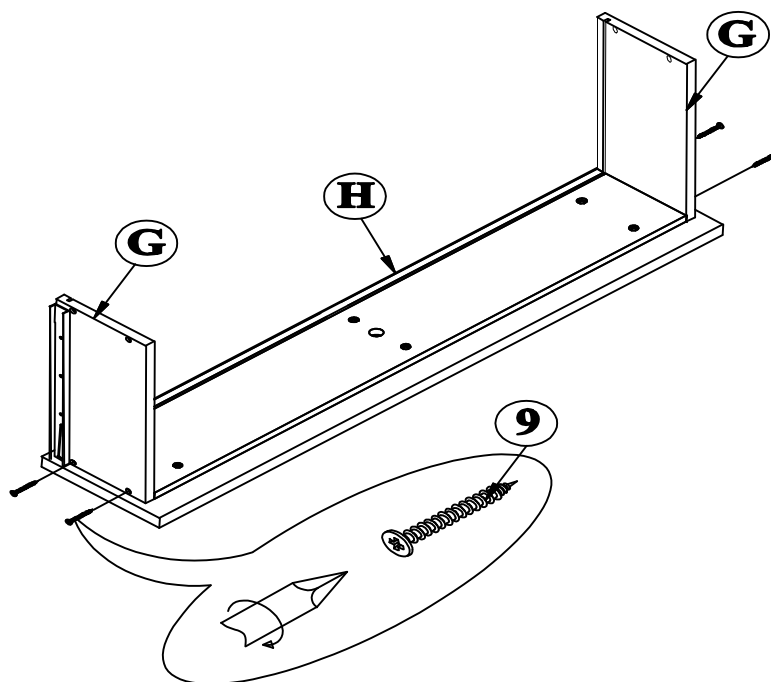


## STEP 7

 Slide drawer bottom (I) into grooves of drawer sides (G) and drawer front (H) as shown below.

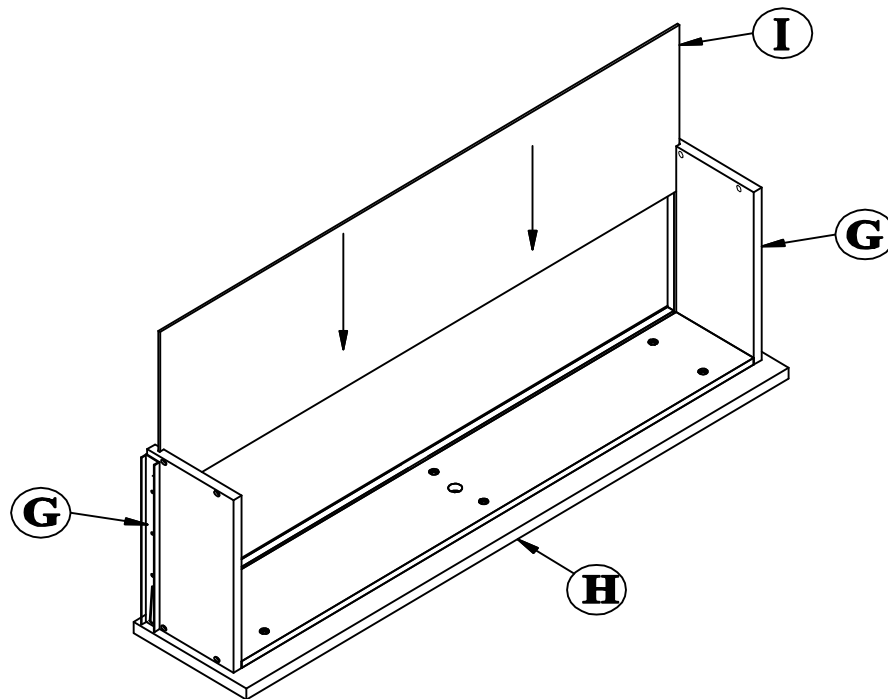


## STEP 8

 Attach the drawer back (J) to the drawer sides (G) with screws (9) as shown below. Tighten with a screwdriver.

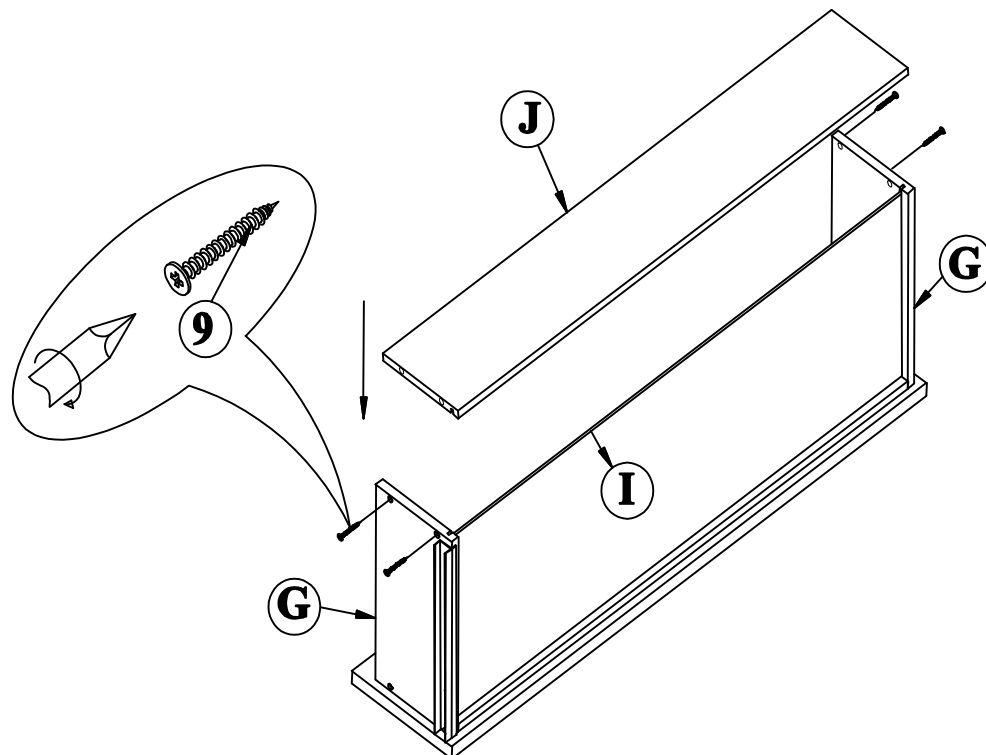

## STEP 9

 Attach knob (10) to front of drawer with pan head screw (8) as shown below. Tighten with a screwdriver.

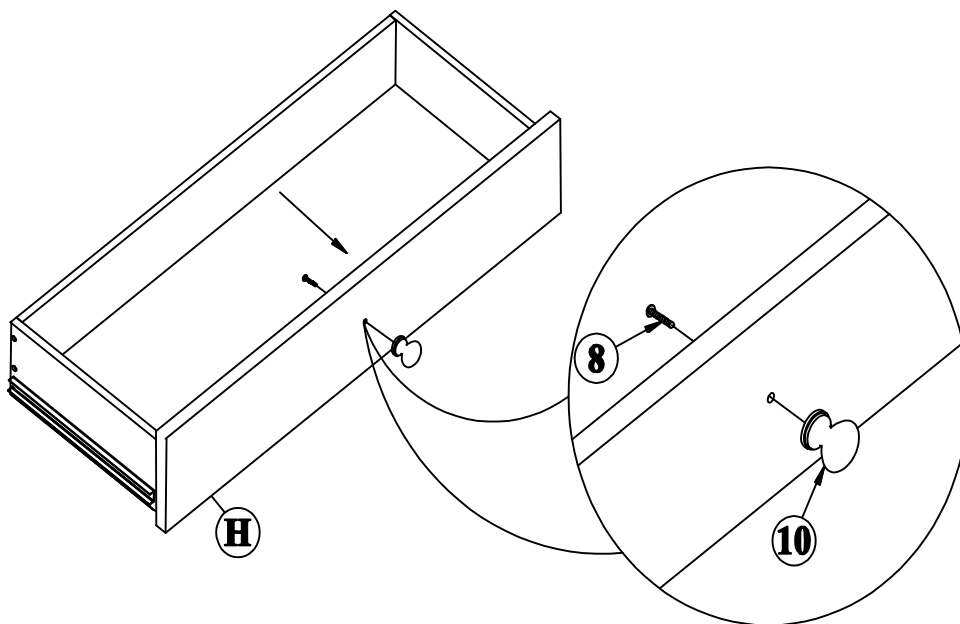

## STEP 10

Carefully put the drawer (from step 9) into the unit.

