



Take out all drawers and shelves, as shown below.

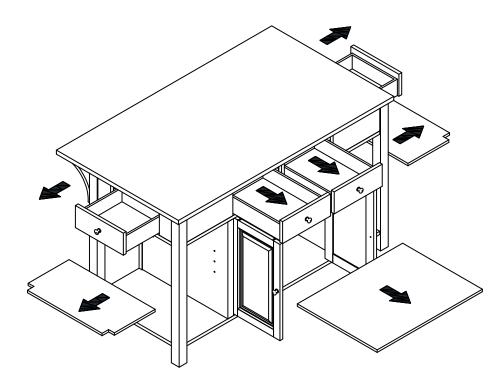


STEP 2

Use a screwdriver to loosen screws. Then remove banana supports as shown below.

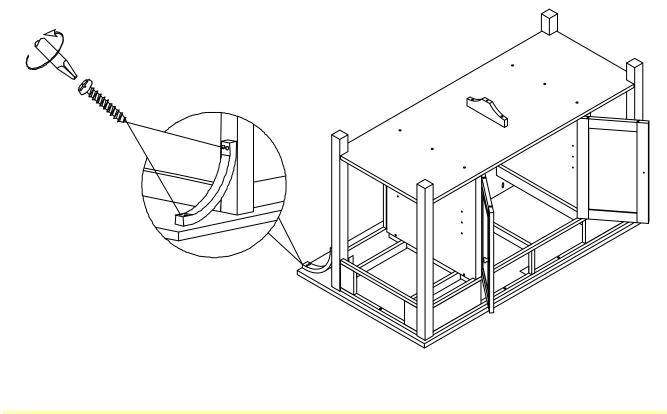


ITEM NO.: WC-6034A AND WC-6034B REVISED AUG 22, 2018

Use a wrench to loosen the nuts and washers. Then remove the legs as shown below. Use a screwdriver to loosen screws at the corner as shown below. Re-attach the legs to the unit.

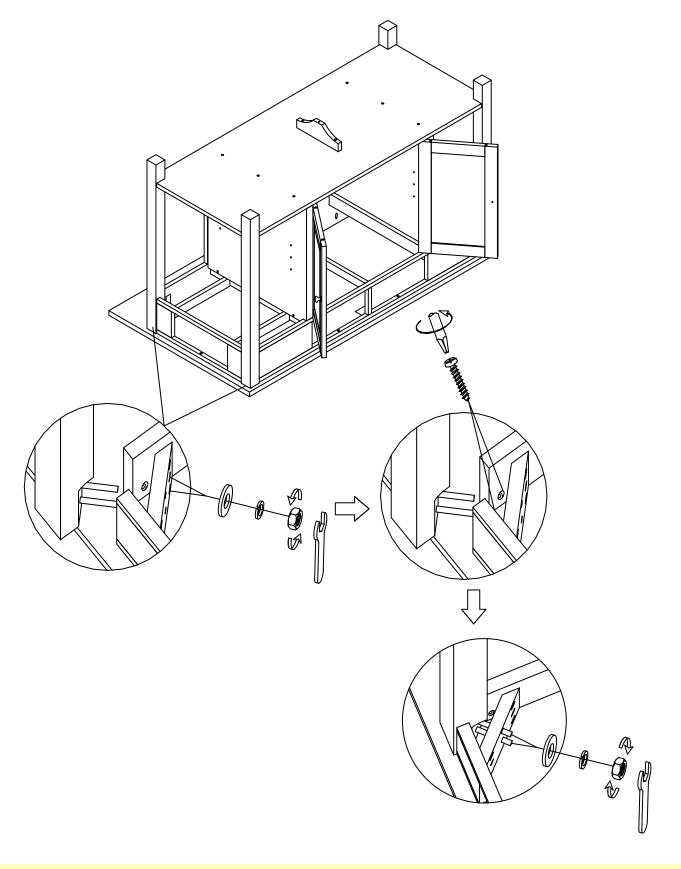


ITEM NO.: WC-6034A AND WC-6034B REVISED AUG 22, 2018 **Printed in Vietnam**

Use a screwdriver to loosen screws. Then remove the top as shown below.

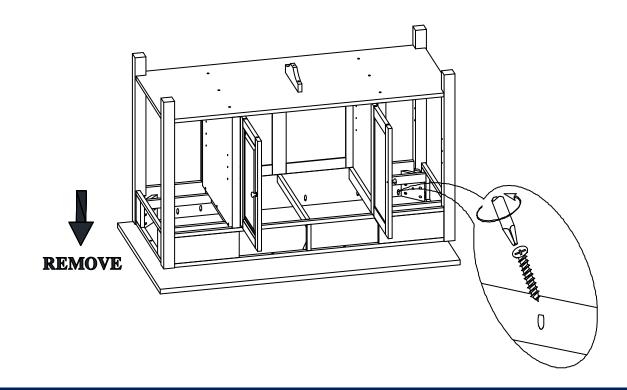


STEP 5

Re-attach top and banana supports to the unit with screws (from step 2, 3, 4) as shown below. Tighten with a screwdriver.

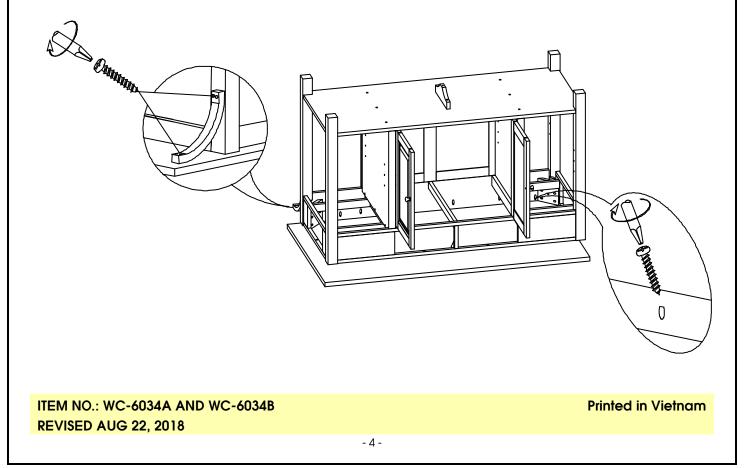

Insert the drawers and shelves into the unit as shown below.

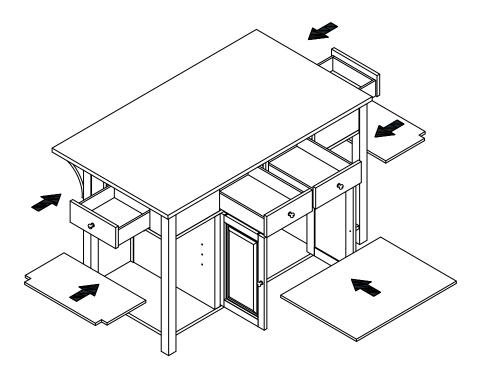

ITEM NO.: WC-6034A AND WC-6034B REVISED AUG 22, 2018

Printed in Vietnam