

Model #


1374GACf; 1374CAFf

McKenzie Bookcase Left + Right Piers

GAC = Glazed Antique Cherry finish

CAF = Caffè finish

Assembly Instructions

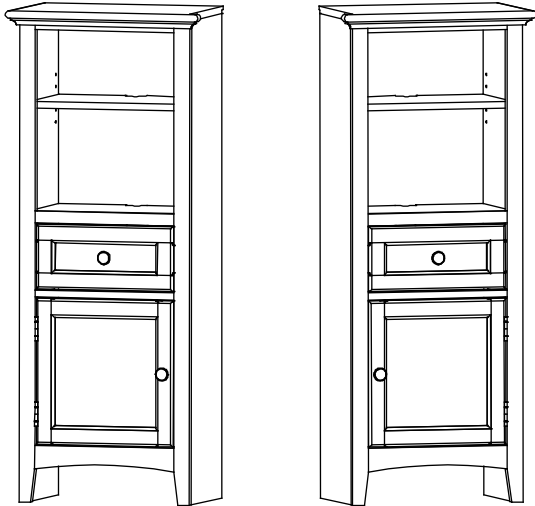

Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- Do not overload the drawers or shelves.
- Unload items before you move this unit.
- This assembly requires two people.

WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer.

For more information go to: www.p65warnings.ca.gov/furniture

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:

Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).

You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • **Outside the U.S.:** 541-687-0213

Fax: 541-687-2060 • **Email:** info@whittierwood.com

**Whittier
Wood**
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA

Production Code:

























VN

02/17



1374GACf; 1374CAFf McKenzie Bookcase Left + Right Piers

Parts List

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and part name.

Part	Description		Quantity
Aa	Left Top Assembly (attached)		1
Ba	Right Top Assembly (attached)		1
Cc	Case		2
D	Back (attached)		2
E	Adjustable Shelf (installed)		2
Fb	Door (installed)		2
G	Drawer Box (installed)		2
H	Drawer Face (attached)		2
I	Knob (attached)		4
Jf	#8 x 1-1/2" Machine Screw Tuscan (installed)		4
K	10" Drawer Slides (pre-installed sets)		2
L	Shelf Bracket (installed)		8
M	#6 x 1/2" Undercut Screw (inserted)		8
N	#8 x 1-1/4" Black Screw		6
S	#6 x 5/8" Philtruss Screw (inserted)		10
T	T-Nut (inserted)		8
U	Adjustable Glide (installed)		8
Xf	#8 x 7/8" Black Lo-Profile Screw (inserted)		8
Y	#8 x 1-1/4" Pan Head Screw (inserted)		14
ZC	Hinge (attached)		4
ZD	#6 x 3/4" Philtruss Screw (inserted)		8
ZE	#6 x 1/2" Philtruss Screw (inserted)		8
ZF	#6 x 5/8" Undercut Screw ZN (inserted)		0 (GAC) 24 (CAF)
ZG	#8 x 1-3/8" Lo-Profile Screw (inserted)		8

1374GACf; 1374CAFf McKenzie Bookcase Left + Right Piers
Parts List


Part	Description	Quantity
ZH	Magnetic Lock & Plate (pre-installed sets) 	2
ZI	#6 x 5/8" Undercut Screw AB (inserted) 	28 (GAC) 4 (CAF)

1374GACf; 1374CAFf McKenzie Bookcase Left + Right Piers

Assembly Instructions

Tool Required: Phillips Screwdriver

1. To move the Adjustable Shelf (E), remove the #6 x 1/2" Undercut Screws (M) and the Shelf (E). Reposition the Shelf Brackets (L) to the desired positions, replace the shelf and insert the screws. See Figures 1 and 1a.

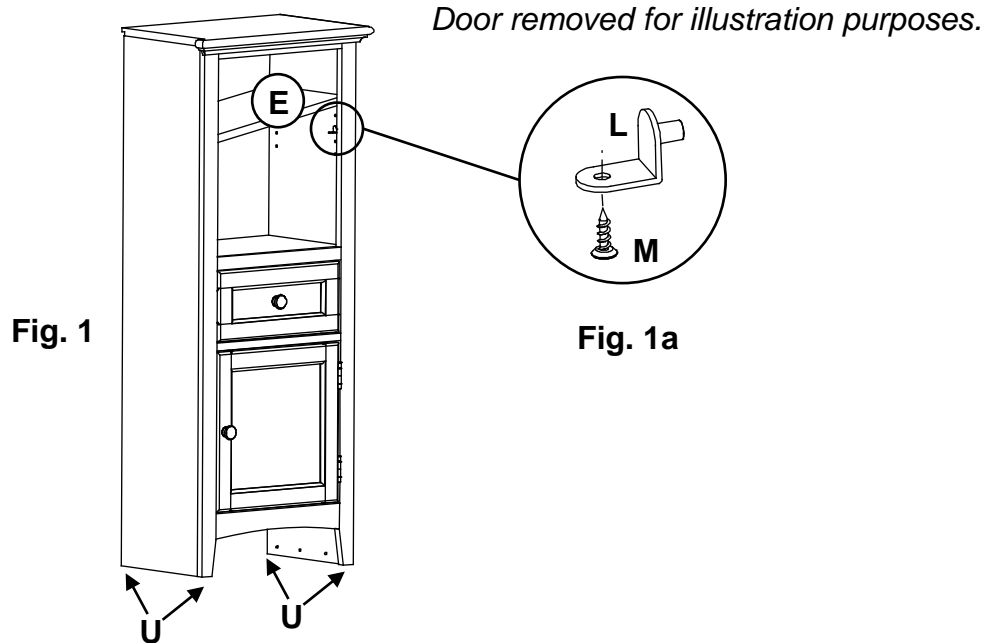

2. Move the piers to your desired location. To level the piers, rotate the Adjustable Glides (U) found on the bottoms of the legs. See Figure 1.
3. **This is optional, but we recommend you complete this step to help make your piers more stable.** Insert six #8 x1-1/4" Black Screws (N) into the predrilled holes on the side panels of the left and right piers and attach the piers to the Bookcase Headboard. See Figure 3.

Door removed for illustration purposes.

