


ASSEMBLY INSTRUCTIONS

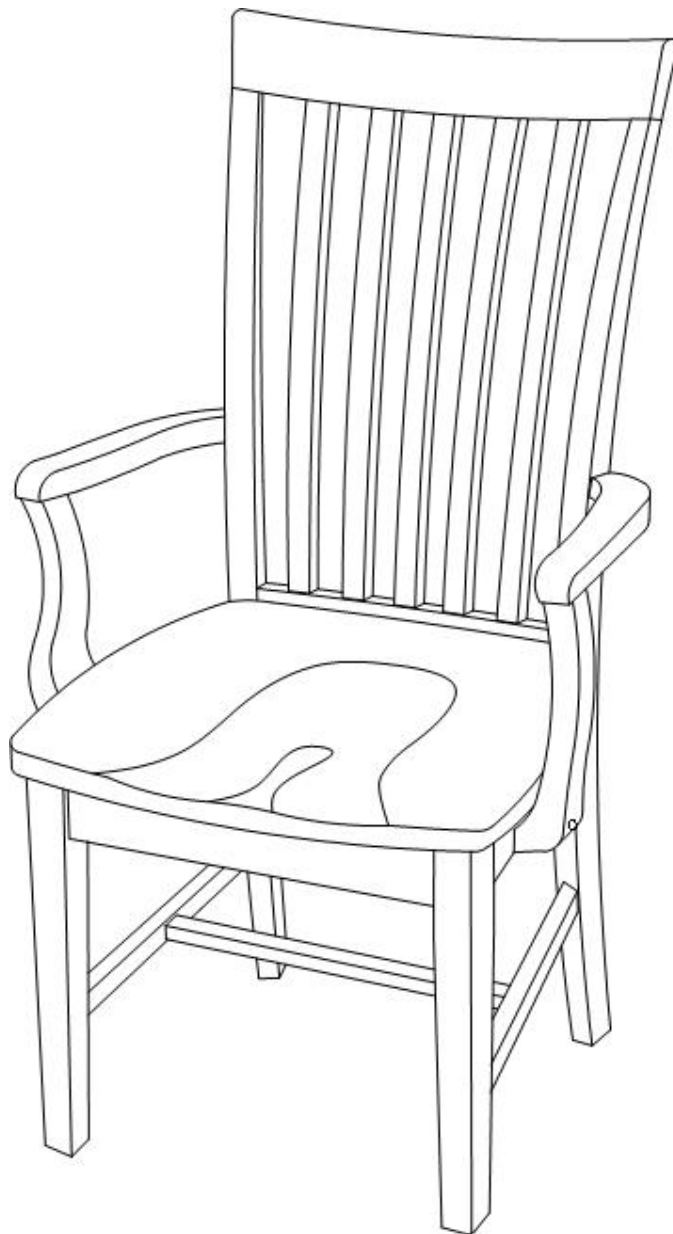

Description : TALL MISSION ARM CHAIR
Item No. : C - 465A

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.

If hardware is missing or you have difficulty assembling this product, please call Toll Free: 1-888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.







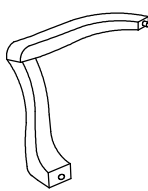
ASSEMBLY TOOLS REQUIRED

NOT INCLUDED
















PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Chair back	1		B	Seat Frame	1	
C	Chair Seat	1		D	Front Leg (L-R)	2	
E	Side Stretcher (L-R)	2		F	Middle Stretcher	1	
G	ARM (L - R)	2					

HARDWARE LIST


When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Short bolt (M6 x 40mm)	3		2	Medium bolt (M6 x 60mm)	4	
3	Long bolt (M6 x 80mm)	6		4	Screw (M3.5 x 15mm)	2	
5	Medium Screw (M4 x 35mm)	8		6	Long Screw (M4 x 40mm)	2	
7	Lock Washer (Ø6.5 x 11mm)	15		8	Flat Washer (Ø6.5 x 19mm)	13	
9	Allen Key (4x80mm)	1		10	Hexagon nut (M6x10mm)	2	
11	Wrench (10mm)	1		12	Medium flat Washer (Ø6.5 x 13mm)	2	
13	Wood Plug (Φ14.5)	2					

STEP 1

Attach seat frame (B) to the back (A) with bolts (1) and (3), and washers (7) and (8), as shown below. Tighten with Allen key (9).


Note: DO NOT tighten any of the bolts, until the chair is assembled, then put on a flat level surface to make sure the chair is level and then tighten the bolts.

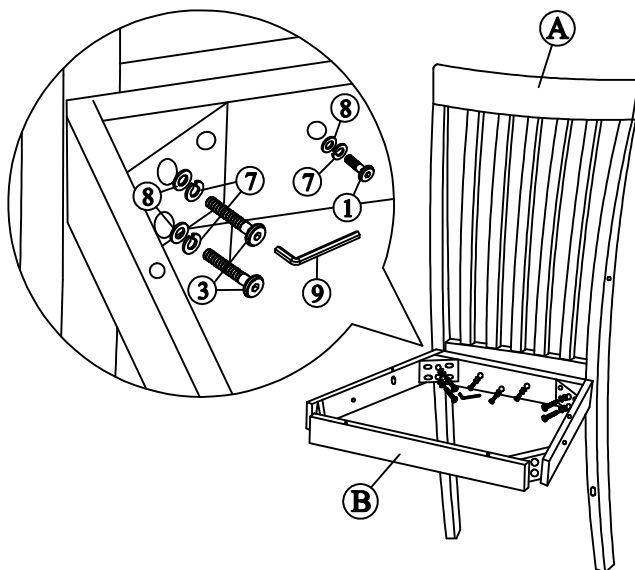

STEP 2


Attach front legs (D) to the seat frame (B) with bolts (2), and washers (7) and (8). Tighten with Allen key (9).

Place side stretchers (E) and middle stretcher (F) between front and back legs. Attach stretchers with the screws (4) and (5) as shown below. Tighten with a screwdriver.

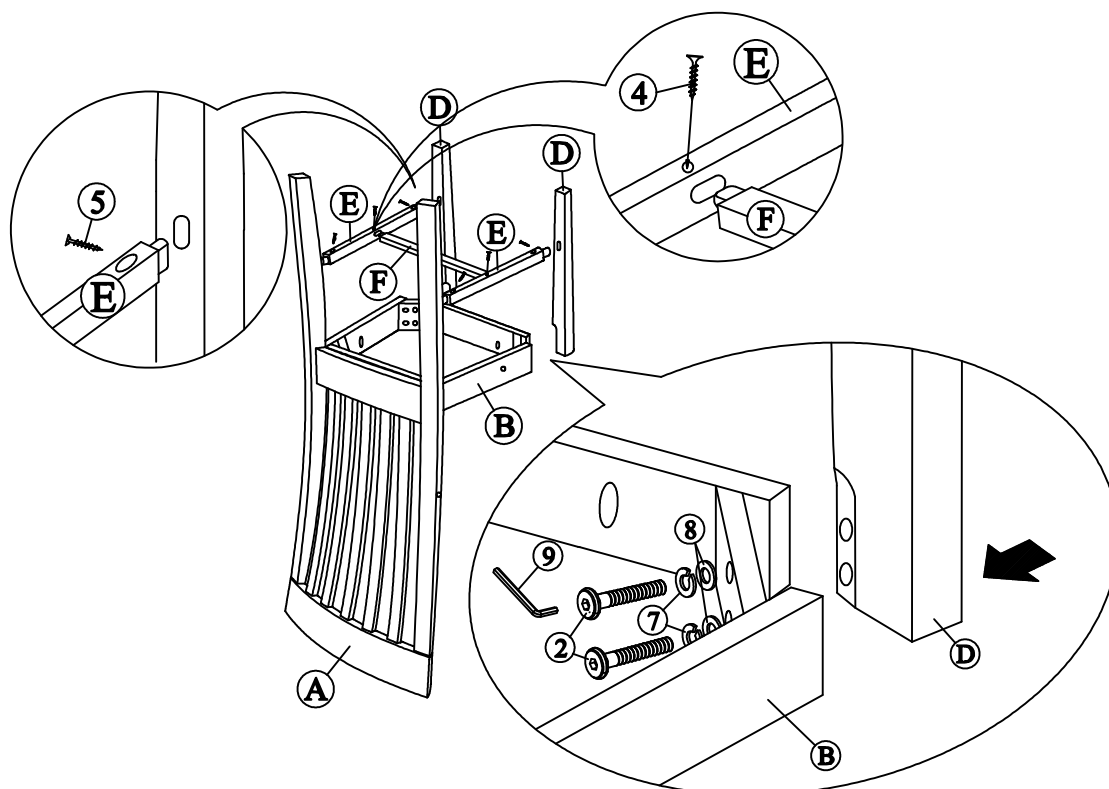

STEP 3

Attach Arms (G) to seat frame with bolts (3), and washers (7) and (12). Tighten with the Allen key (9). Then use Nut (10), and washer (8) and (7) as shown below. Tighten with the Wrench (11). Attach Arms (G) to the back with screws (6). Tighten with a screwdriver.

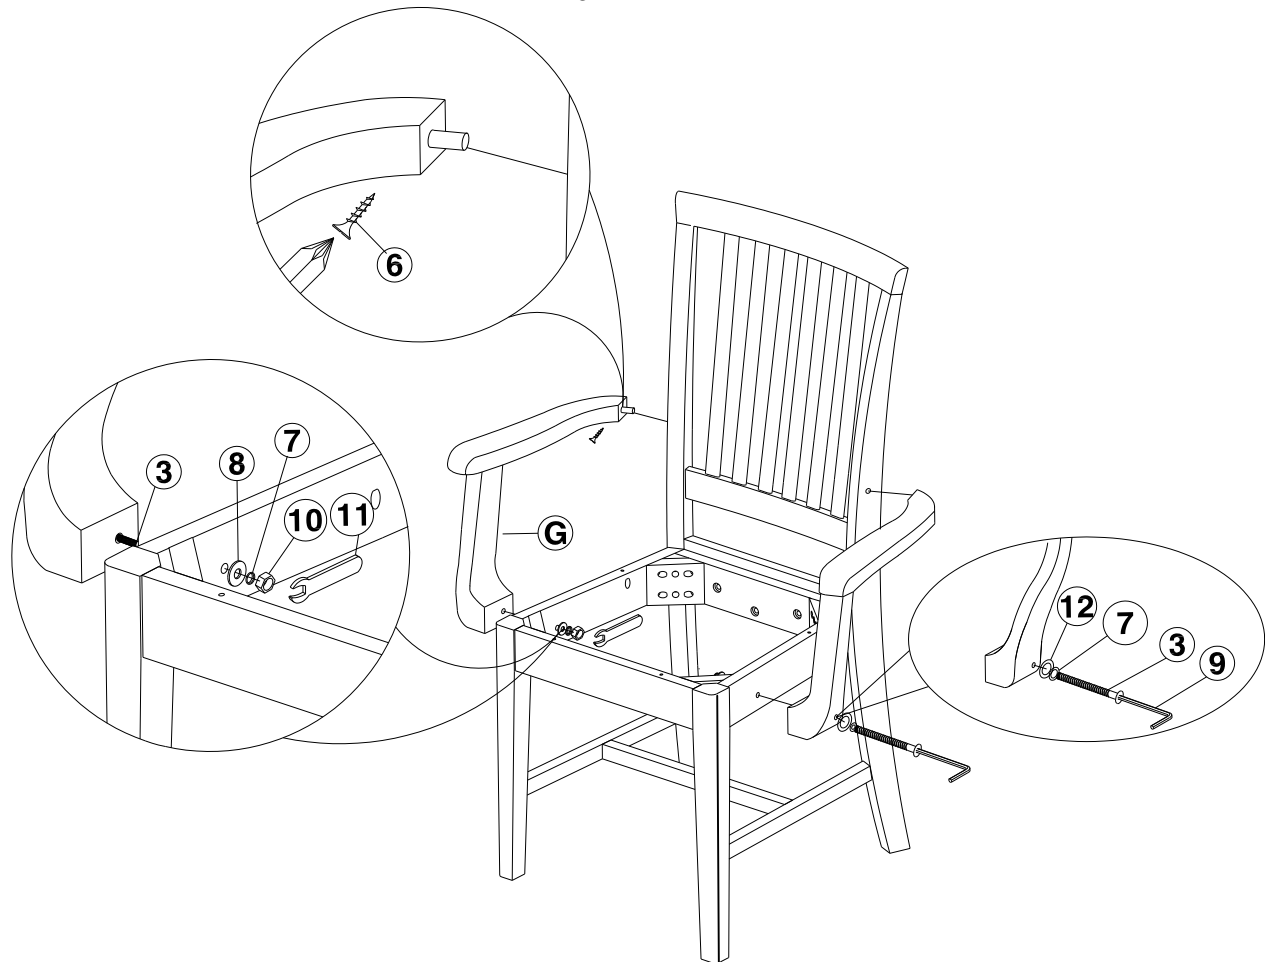

STEP 4

Attach the seat (C) to top of the seat frame (B) with screws (5) as shown below. Tighten with a screwdriver.

Then insert wood plugs (13) over bolts to cover them.

